


TOP OFF FUNCTIONS

(ROCV™ FUNCTION ON REVERSE)

S1 & S2 Modes

In S1 & S2 Modes, one sensor is installed in the sump and one sensor is installed in the top off bin

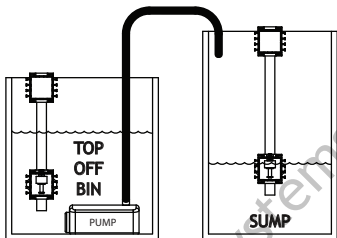


Sensor with
Red Wire
is Mounted
above pump

Sensor with
Black Wires
is Mounted
at the Running
Level

S3 Mode

In S3 Mode, both sensors are installed
in the sump

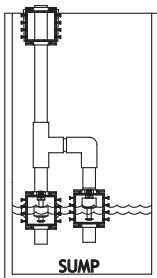


Sensor with
Black Wires
is Mounted at the
“Turn Pump On”
Level

Sensor with
Red Wire
is Mounted Higher,
at the “Turn Pump
Off” Level

ROCv™ FUNCTION

(TOP OFF FUNCTIONS ON REVERSE)

For use with the ROCv™, both sensors are installed in the Top Off Bin

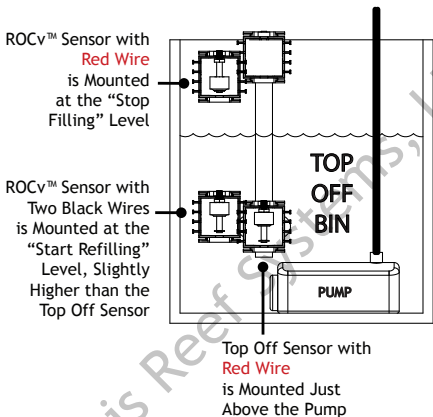

**Note: For Top Off or ROCv™ Functions,
Always Plug the Sensor with the
Red Wire into the Red Wire of the Y-Adapter,
and the Sensor with Two Black Wires
Into the Black Wire of the Y-Adapter**